
K150 PIC Programmer

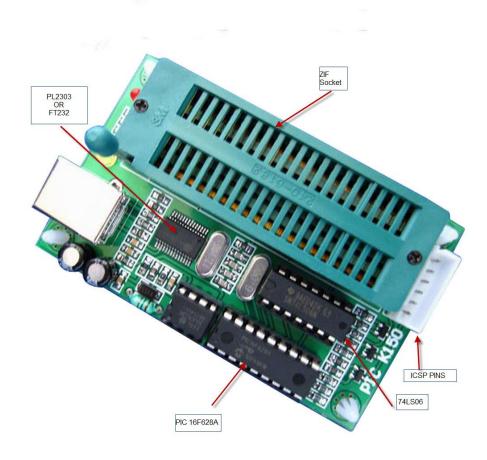


Protocol Number: To help match hardware and firmware there is a protocol number in each. If they are the same (P016) in this case then the software and firmware are matched. This should stop problems with matching firmware with MicroPro versions in the past. (Protocol number was called Build number in diypack12 but we changed it.)
Upgrading. You can upgrade by buying and programming a second 628 (-20/P or 628A) PIC, or if you have access to a second PIC programmer and reprogram the existing 628 with the later hex file.

ICSP: Does not support low voltage programming. The LOW pin is an open collector output, which when active will pull the LOW pin to ground. It can be used in ICSP to hold the LVP pin low while programming, or the OSC1 pin, or any part on the target board which may need control (in this manner) during programming.



K150V2 PCB: This board is the same as the original version except 3 3K3 resistors have been added to stop all programming voltages appearing at the programming and ICSP pins during board reset.

K150 Schematic:

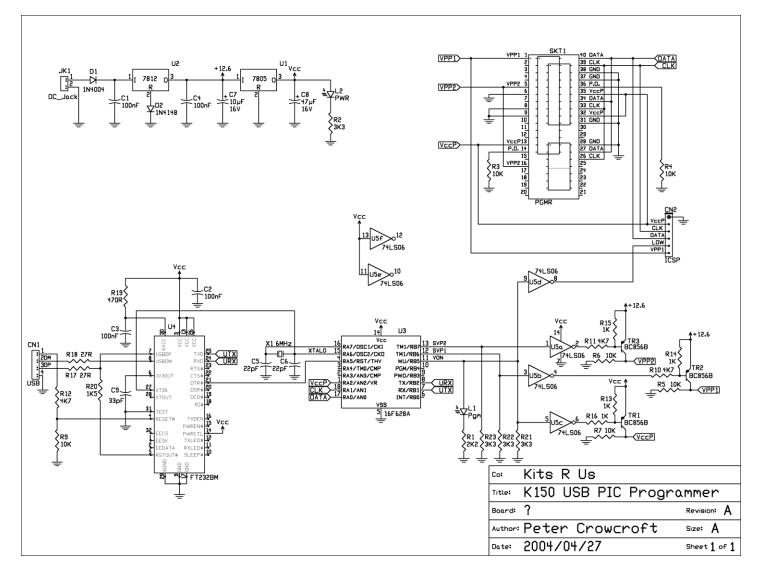

NOTE: K150 PIC programmer is working only using its own software that will be shown in the next pages .



K150 Supporting PIC:

12C508 16C65A 16C77 16F76 16F877 12C508A 16C65B 16C710 16F77 16F877A 12C509 16C66 16C711 16F737 18F242 12C509A 16C66A 16C712 16F747 18F248 12C671 16C67 16C716 16F767 18F252 12C672 16C620 16C745 16F777 18F258 12CE673 16C620A 16C765 16F83 18F442 12CE674 16C621 16C773 16F84 18F448 12F62916C621A 16C774 16F84A 18F452 12F675 16C622 16C83 16F87 18F458 16C505 16C622A 16C84 16F88 18F1220 16C554 16C71 16F627 16F818 18F1320 16C558 16C71A 16F627A 16F819 18F2220 16C61 16C72 16F628 16F870 18F2320 16C62 16C72A 16F628A 16F871 18F4220 16C62A 16C73 16F630 16F872 18F4320 16C62B 16C73A 16F648A 16F873 16C63 16C73B 16F676 16F873A Added from diypack23: 16C63A 16C74 16F684 16F874 16F5x 16C64 16C74A 16F688 16F874A 10Fxxx 18F6525 6621 8525 8621 (all beta) 16C64A 16C74B 16F73 16F876 16C65 16C76 16F74 16F876A Added diypack25 12F683


Support for 16F88 added in diypack22 on. Note 10K resistor needs to be



K150 Software:


Download diypack25 and the USB to Serial driver from the website and follow this instructions.

Driver Installation:

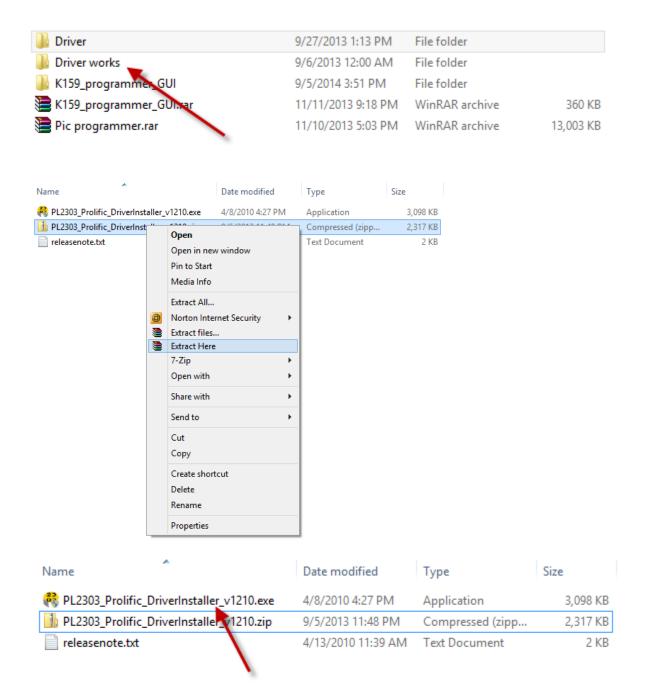




K150 Software installation:

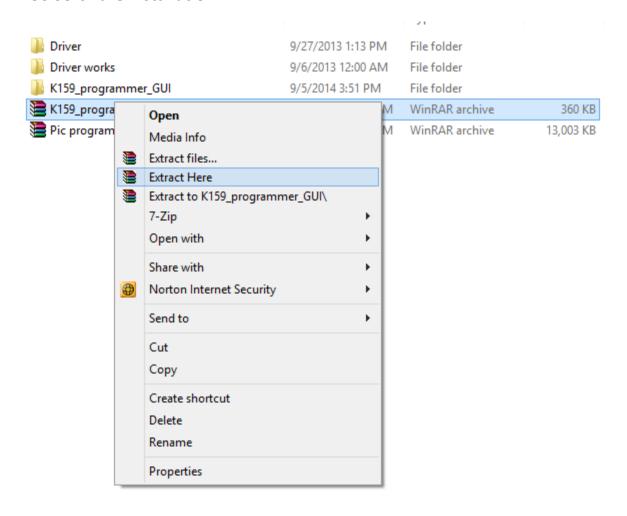

Driver	9/27/2013 1:13 PM	File folder	
Driver works	9/6/2013 12:00 AM	File folder	
K159_programmer_GUI	9/5/2014 3:51 PM	File folder	
K159_programmer_GUI.rar	11/11/2013 9:18 PM	WinRAR archive	360 KB
Pic programmer.rar	11/10/2013 5:03 PM	WinRAR archive	13,003 KB
\			




chipdata.cid	8/23/2007 5:06 PM	CID File	200 KB
DIYpack25ep.zip	9/2/2013 3:28 PM	Compressed (zipp	405 KB
epk128.hex	9/5/2007 12:52 PM	HEX File	12 KB
epk149a.hex	9/5/2007 12:52 PM	HEX File	12 KB
epk149bf.hex	9/5/2007 12:52 PM	HEX File	12 KB
epk150.hex	9/5/2007 12:52 PM	HEX File	12 KB
epk182.hex	9/5/2007 12:52 PM	HEX File	12 KB
🕽 fixhex2.exe	9/12/2007 2:56 PM	Application	22 KB
microbrn.exe	8/23/2007 5:06 PM	Application	660 KB
? microbrn.hlp	8/23/2007 6:16 PM	Help file	47 KB
mpro.dat	9/22/2014 12:39 AM	DAT File	1 KB
🔁 readme_ep.pdf	9/11/2007 10:30 PM	Adobe Acrobat D	44 KB

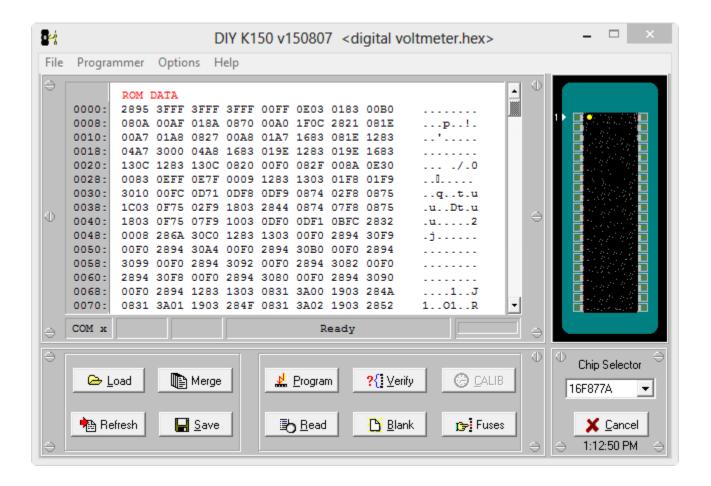




Select the K150 Board:

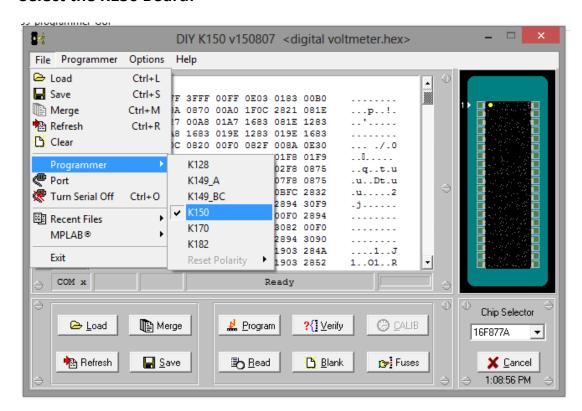


2-Select the COM Port:






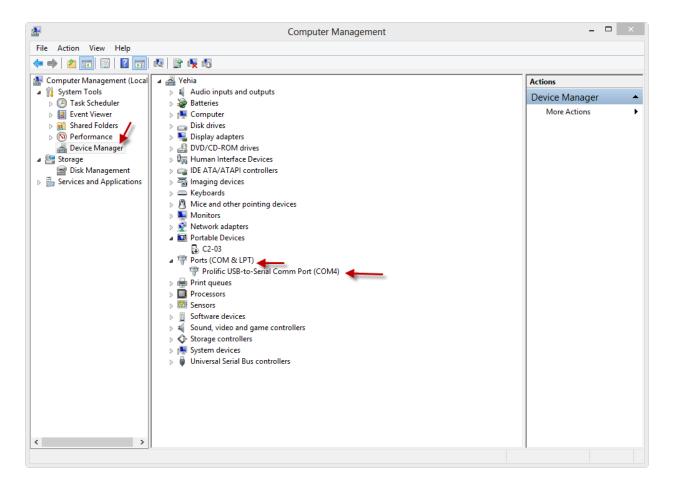


NOW we know that out COM Port is COM num 4.

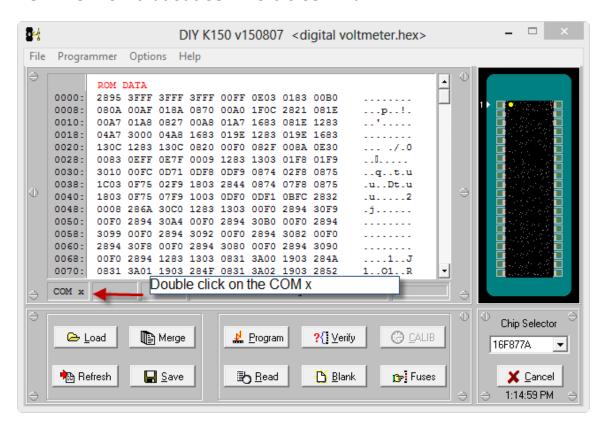



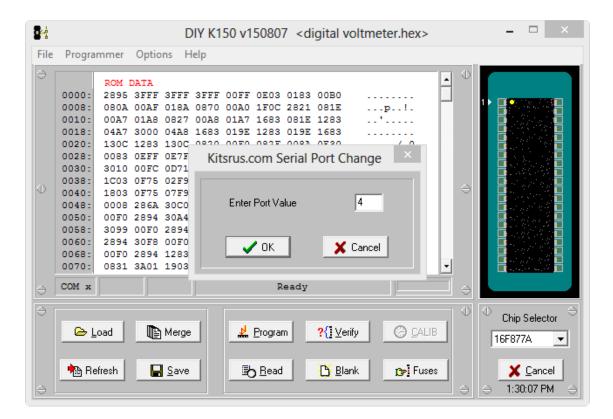


Type 4 and press ok

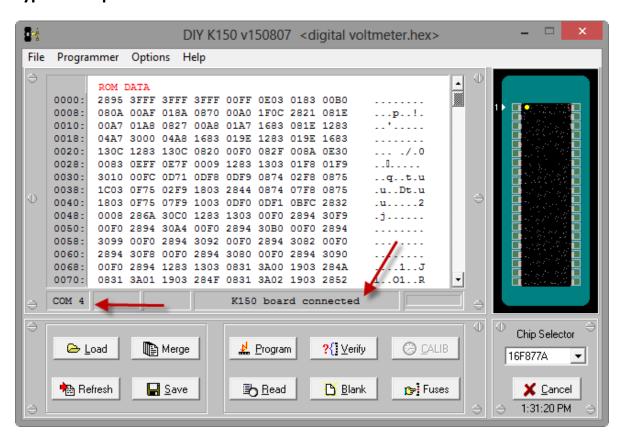

Now it is ready to work




If Some thing like that appear to you

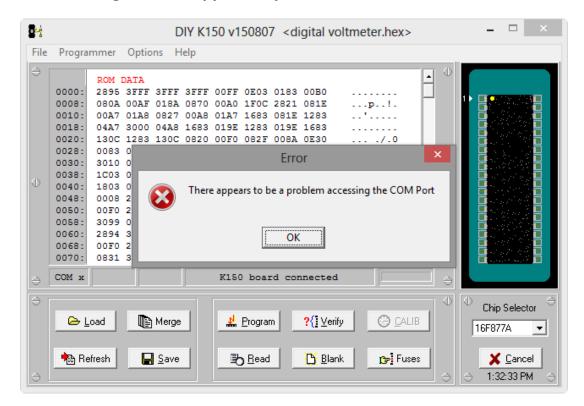


so you have type a wrong COM Port or didn't install the driver correctly

Upload Hex file and programming:

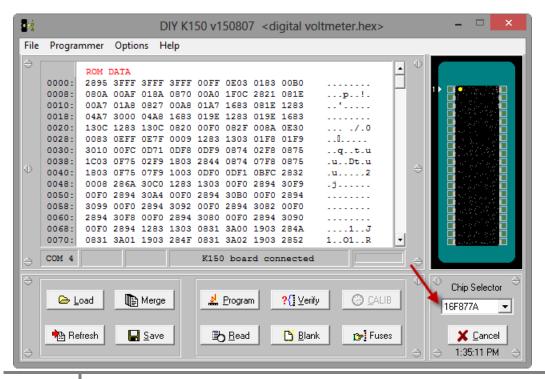





select the PIC you want to program from that combo box

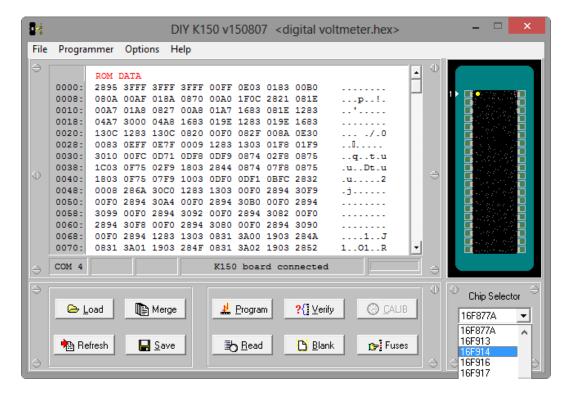


then upload your HEX file

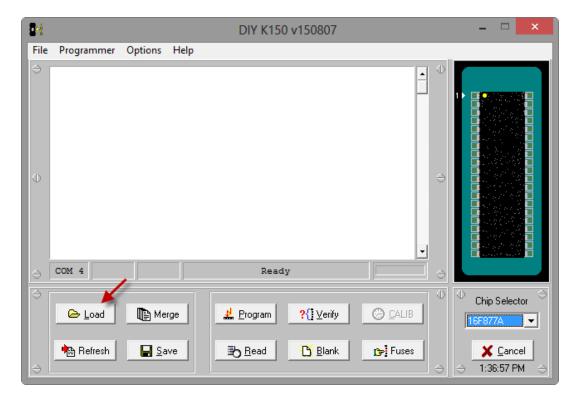



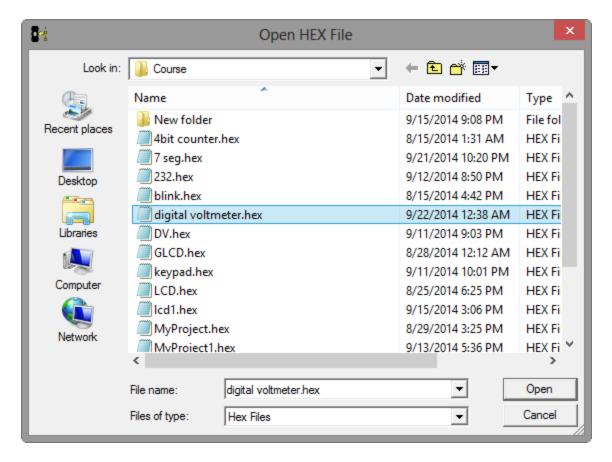



click open

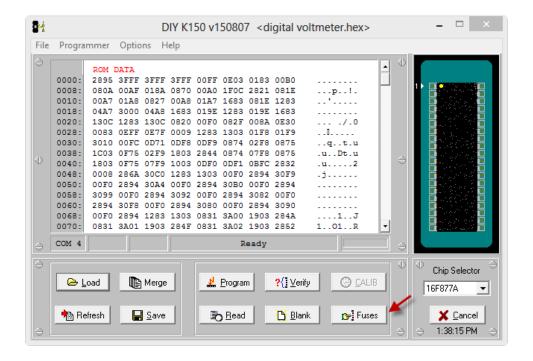




then choose your fuses configuration and if you already do so in your compiler you must open fuses and press ok

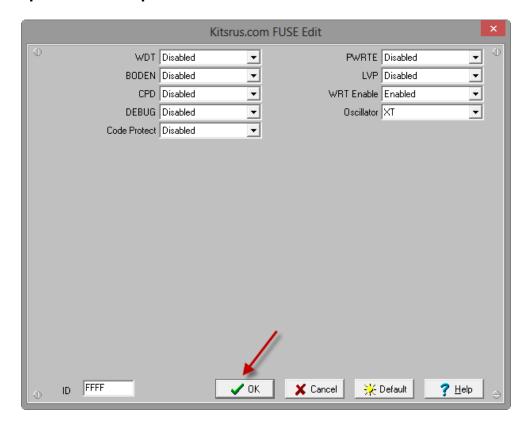

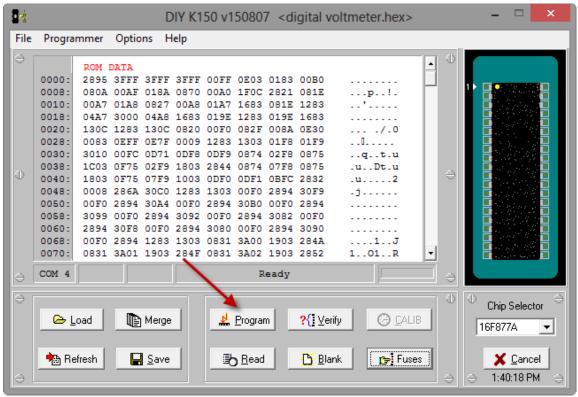


Then press program



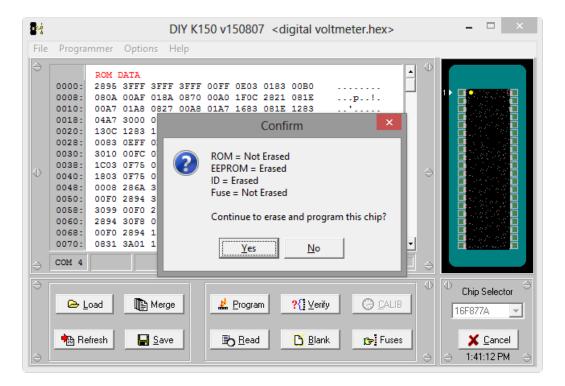


press yes

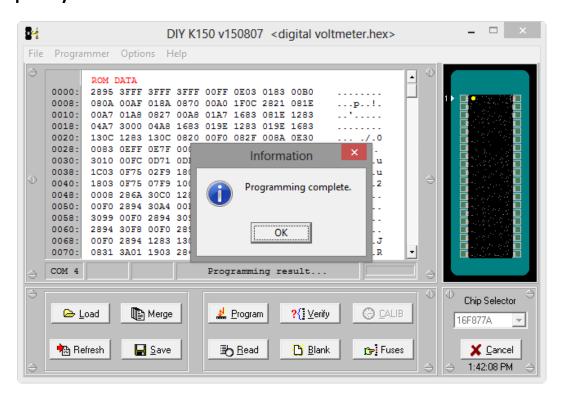

Now the Uploading is done and Enjoy



Note:

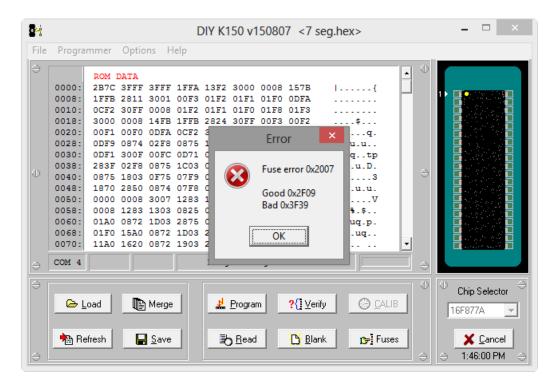


if something like that appear so your forgot to check the fuses as said before.

fuses box must be checked once even if you make the right configuration just open it and press ok as we said before.



ICSP programming:

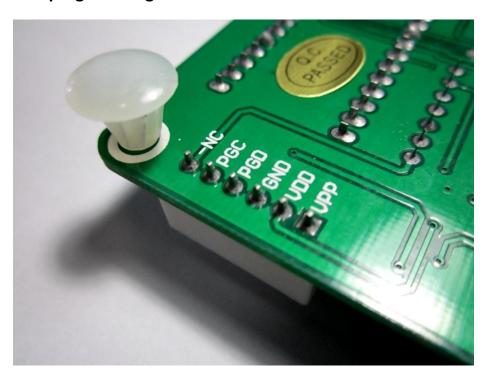

Just connect this pins with the equivalent in the PIC and program by the same way .

Note: NC is not connected pin

